

# INTERFACE ModBus ETERM



### Features

Interface for eterm devices:

By means of a Bus system (proprietary protocol) it is possible to connect

- Meter Bus Centralizers
- Boiler management control panels
- System management control panels

With eterm Bus it is possible to manage from PC all devices either in local or remote mode:

- RS232
- USB
- Modem GSM/GPRS (code QMASTER01)
- LAN Ethernet RJ45 (code QMASTER02)

Data can be managed through:

- etermPCmanager, software to be installed on a connectable PC
- Via USB or RS232
- Via Modem (optional for PC)
- Via internet
- etermEASYmanager, WEB software available on [www.eterm.it](http://www.eterm.it) for a synoptic view of the plant

Description	Code
Master eterm with modem GSM/GPRS	QMASTER01
Master eterm with LAN Ethernet RJ45	QMASTER02
Adapter 24 Vcc for Master eterm	ALQMASTER

Description	Code
Interface ModBus eterm with modem GSM/GPRS	QMBET01
Interface ModBus eterm with LAN Ethernet RJ45	QMBET02

Master eterm is equipped with:

- 1) 4 plugs, for meters with pulse output that might be in the boiler room:
  - Gas
  - Hot water
  - Cold water
  - Power
- 2) NTC plug for external probe, information will be available to all slave devices in the system
- 3) Digital out (not used)

### ModBus master function

After appropriate configuration Master eterm can control ModBus slave devices. (Connection RS485)

### ModBus slave function

After appropriate configuration Master eterm can be used as a slave of a ModBus device and transfer data (both in read and write mode). Parameters can be set with etermPCmanager. (Connection RS485)

### Power 24 VCC

(Adapter Code ALQMASTER)

### Connections

